


When setting up the Teriostar for the first time out of box you want to change the print and copy meter to read in Sqft. Here are the steps on how to do this function change:

Select the Menu button on Teriostar

Go into Maintenance mode by pushing the following buttons: Enter, Cancel, Enter, Enter

Which will bring up the screen below.

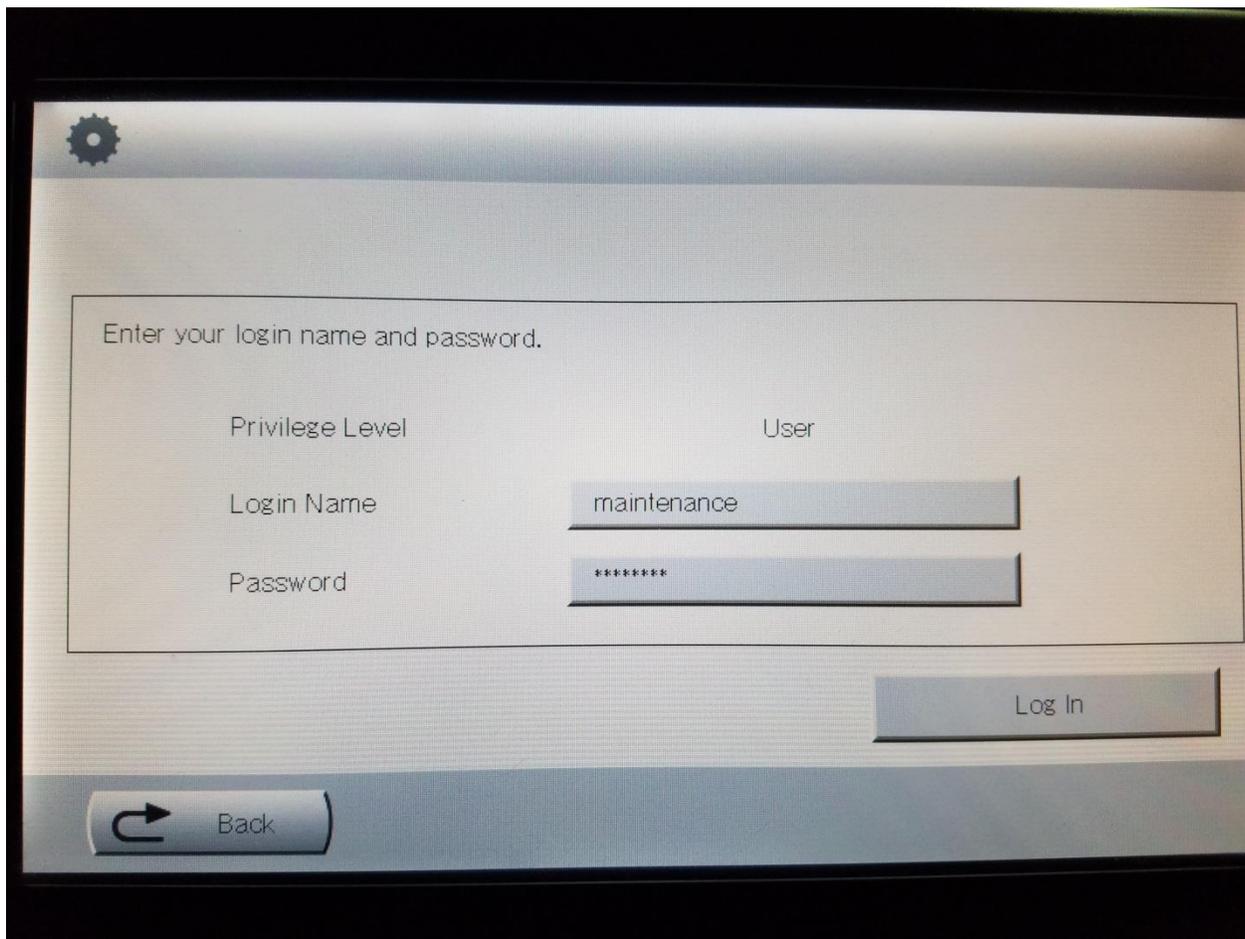


Type in the following:


User Name: Maintenance

Password: ttk2010

Once this function is complete you will see the **RED** wrench in upper left corner on screen like picture below.

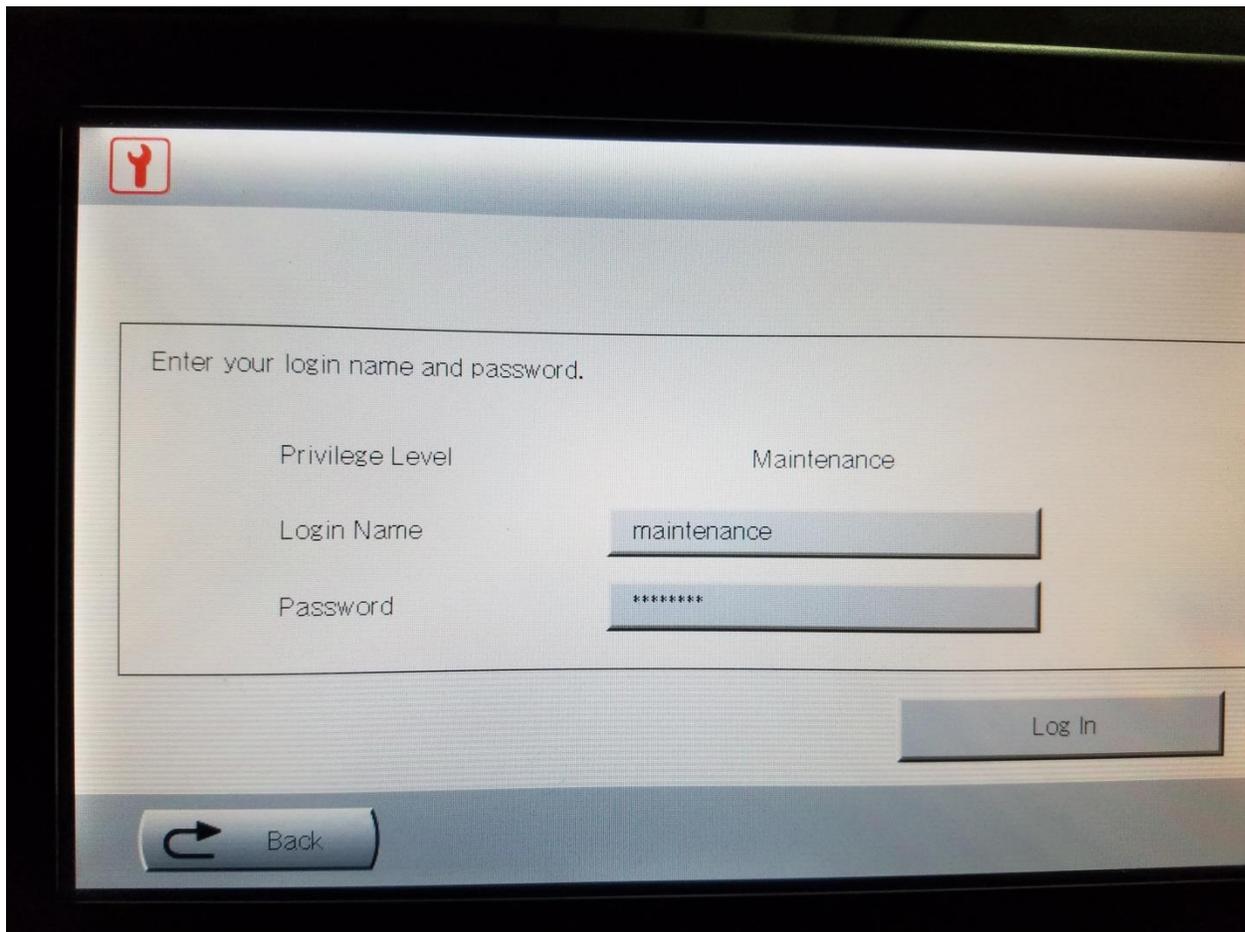

Select Login button, select page 2 (Will show you the screen below), Select Stanby Screen Display button.

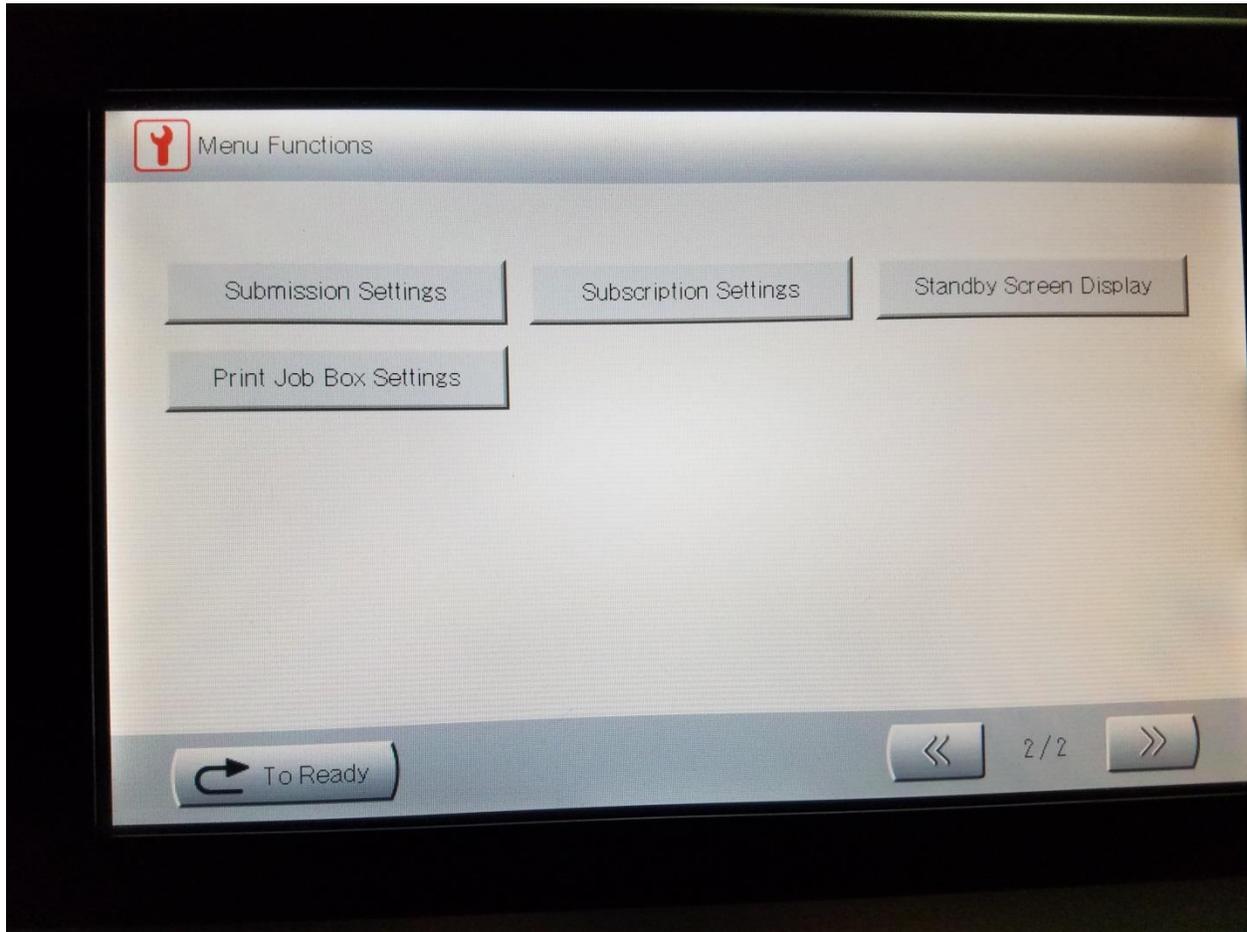


In this screen you want to make your sections as shown in photo below:

Indication 1 Total Print Area in Copy Mode “Area” respresents Sqft.

Indication 2 Total Print Area in Print Mode “Area” respresents Sqft.

Indication 3 Is off

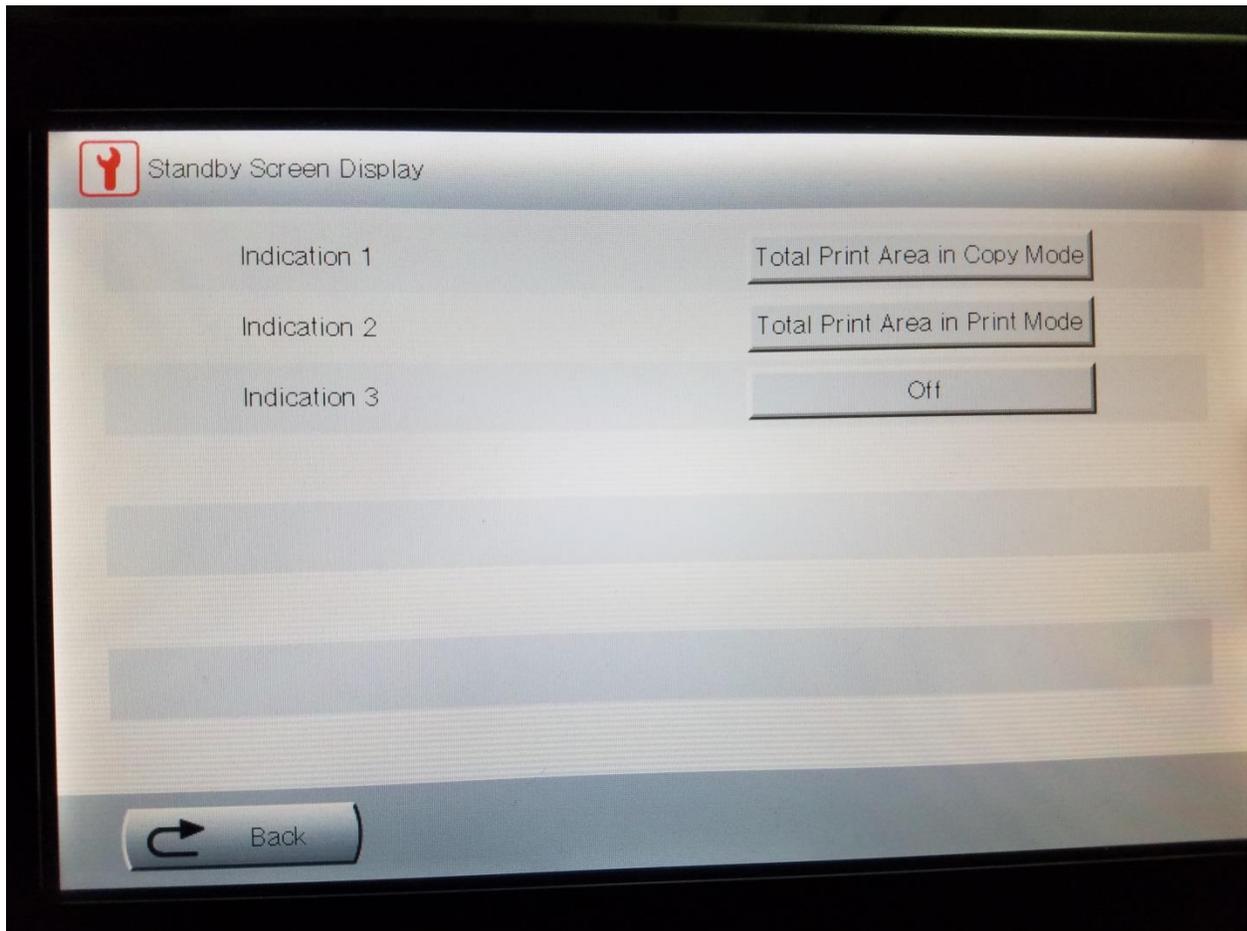

This is what pull down screen looks like as you make your selections.

